 




de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-aanwijzing
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning
pl Instrukcja montażu
cz Montážní návod
hu Szerelési útmutató
el Οδηγίες εγκατάστασης
ru Инструкция по установке
zh 安裝指導

 
Stösseldichtung
Stem sealing gland
Joint d'étanchéité d'axe
Spindeltätning
Spindelafdichting
Premistoppa stelo
Karatiiviste
Racor de cierre de vástago
Tætningsflange for ventilspindel
Uszczelnienie trzpienia
Ucpávka vřetene
Szelepszár tömítés
Στέλεχος άξονα
Сальник уплотнения штока
閥杆密封函

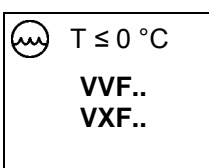

4030Z30

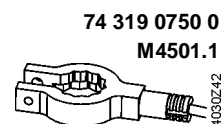


$T \leq 0 \text{ } ^\circ\text{C}$
VVF..
VXF..



ASZ6.6

4030Z42

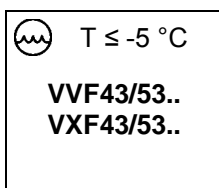

$T \leq -5 \text{ } ^\circ\text{C}$
VVF43/53..
VXF43/53..




ASZ6.6

4030Z42



 
4 284 8806 0



4030Z39



50...55 Nm

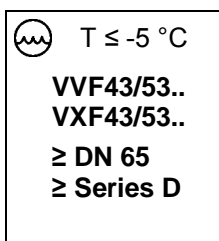

$T \leq -5 \text{ } ^\circ\text{C}$
VVF43/53..
VXF43/53..
≥ DN 65
≥ Series D




ASZ6.6

4030Z42



 4 679 5629 0



4030Z57



120...130 Nm

