
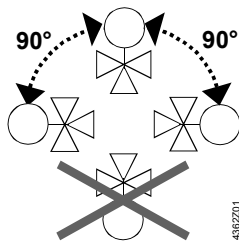



de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-handleiding
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning
pl Instrukcja montażu
cz Montážní návod
hu Szerelési útmutató
el Οδηγίες εγκατάστασης
zh 安裝指導

Stellantriebe
Actuators
Servomoteur
Ställdon
Servomotoren
Servocomandi
Toimimoottorit
Actuadores
Motorer
Siłowniki
Pohony
Motorok
Κινητήρες
执行器


SQS35...
SQS85...

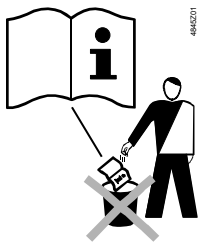


1

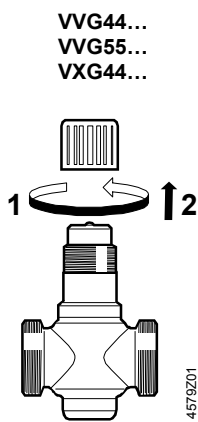


2

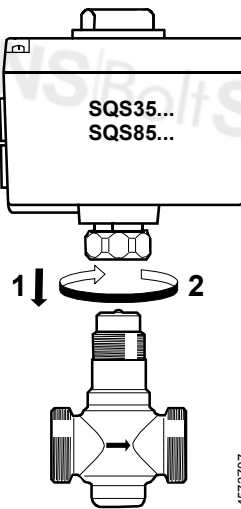


3

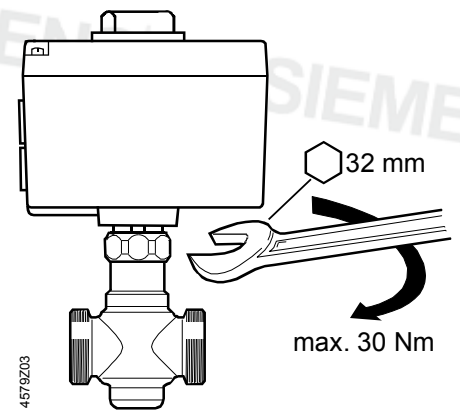




4

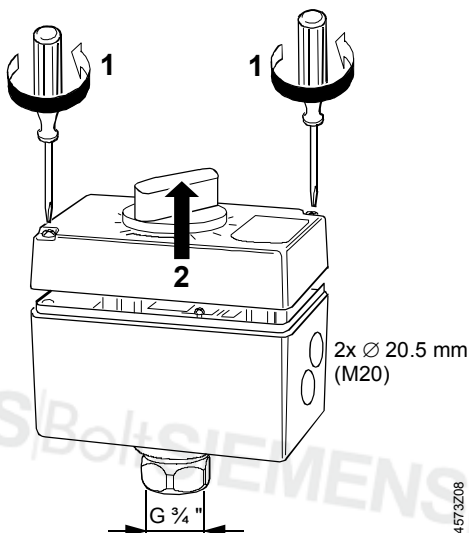




5

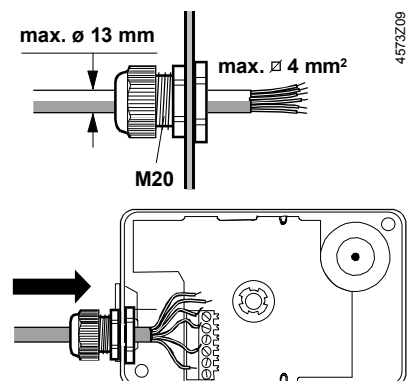




SQS35.00 / SQS35.03

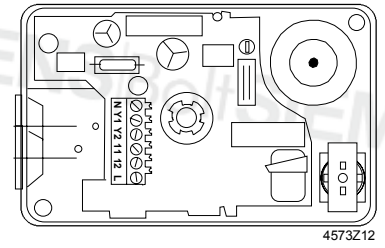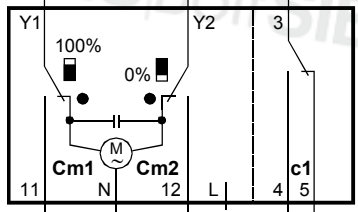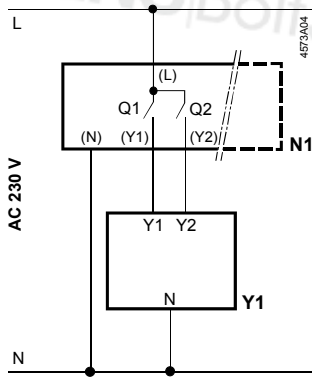




SQS85.00 / SQS85.03

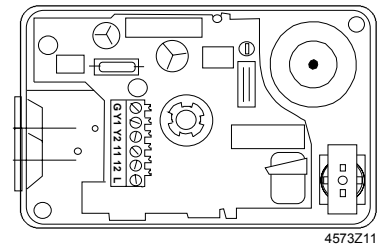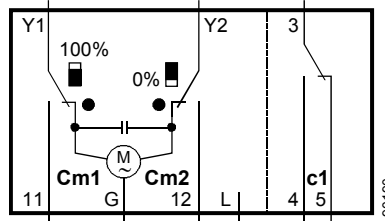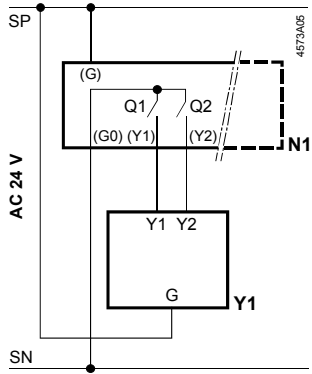

SQS35.50 / SQS35.53

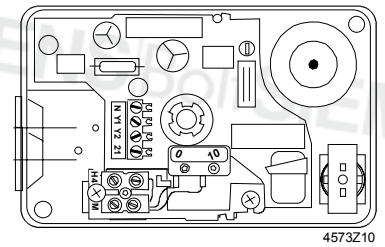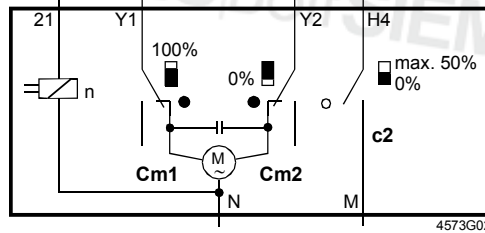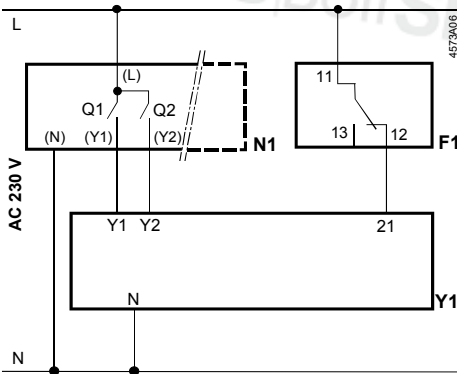

c1 ASC9.6

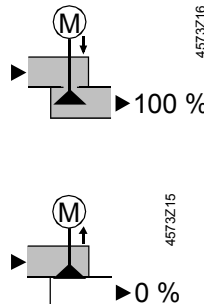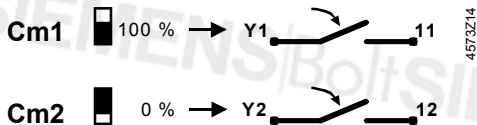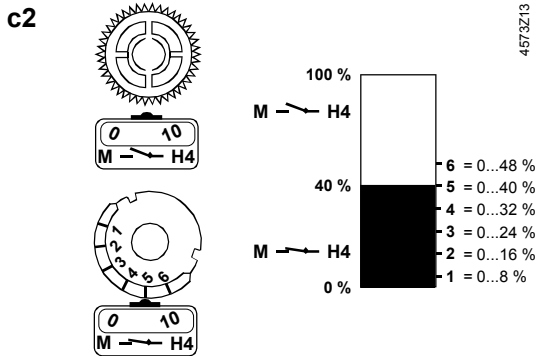

Y1 ↓ → 100 %

Y2 ↑ → 0 %

⚡ → ↑ ↓ Y1, Y2

✱ → ↑ → 0 %

G / G0 AC 24 V

L / N AC 230 V

N1 ⊞

Y1 Ⓜ

F1 ⊥