# IENSR SIEMENS'EMENSBoltSIEMENSBoltSIEN 633





## **Room Unit for QAW740** Synco<sup>™</sup> 700 Controllers

KNX bus connection

Multifunctional, digital room unit for simple remote control of Synco™ 700 controllers.

	Dears within combination with a ConcertM 700 controller for plant in
Use	Room unit in combination with a Synco™ 700 controller for plant in:
	Office and administrative buildings
	<ul> <li>Business and sales premises</li> <li>Schools</li> </ul>
	<ul><li>Hospitals</li><li>Factory buildings and workshops</li></ul>
	<ul> <li>Apartment buildings</li> </ul>
Application	For use with Synco™ 700 controllers for heating, ventilation or air conditioning (⊦
	systems. Only usable for systems with KNX communication.
Functions	
Main functions	<ul> <li>Remote control of a Synco<sup>™</sup> 700 controller</li> </ul>
	Room temperature measurement
	Communication via KNX
	Communication via KNX
CE1N1633en	
2014-07-30	Building Technolo

Operator functions

- Relative temperature setpoint adjustment
- Preselection of operating mode with Mode button
- Timer function with timer button
- Display of operating mode, temperatures, timer function and faults

#### Type summary

	<i>Typ</i> QAW740	Designation Room unit	Compatible with Synco™ 700 controller
Note	Not suitable	for use with the Synco™	RXB controller.
Technical design			
Comfort setpoint relative	Using the setting knob on the room unit, both the Comfort and Precomfort setpoint $2$ can be readjusted by $\pm 3 \degree C (\pm 6 \degree F)$ , which is then transmitted to the controller. The basic setting of the Comfort setpoint is made at the controller itself. During setting with the knob, the display changes to the correction value that is set. If no further settings are made, the setting is acknowledged by the return of the basic display with the actual room temperature value after a delay of 4 seconds.		

Mode button






Measured value readjustement of room temperature

Unit

The Mode button is used to switch between automatic and manual mode. This efficiently matches the room temperature to the respective room use.

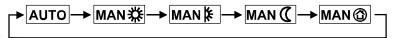

The change of operating mode with the Mode button can automatically be reset by making on the service level. In that case, a reset back to automatic mode is made after the selected period of time (1...99 Std.) has elapsed. However, this function is not activated as standard and the selected operating mode is maintained continuously.

The timer function starts an adjustable time period during which comfort mode is sustained. This function is started by pressing the timer button, and the required period of time for the function is adjusted with the setting Knob, the increments being 15 minutes. When starting the function, the time period used last will appear. A maximum adjustment of 20 hours from the setting time is possible. The room unit transmits the set adjustment to the controller via the bus, but the actual time switch program in the controller remains unchanged.

In case of deviations from the displayed value, the measured room temperature value can be adjusted in the range -4.5...4.5 °C. The room unit transmits the resultant actual value via the bus and indicates it on the display.

CE1N1633en

2014-07-30

The display in °C or °F can be selected.



SIEMENS<sup>Bolt</sup>SIEMENS<sup>Bolt</sup>SIEME Siemens **Building Technologies** 

Room unit QAW740

Fault status messages	Short-circuit or open-circuit of the room sensor is indicated by a bell symbol on the display. The room unit transmits such errors via the bus.	
	The bell symbol also indicates alarms that the assigned controller transmits to the room unit via the bus. The actual temperature value remains on display. In case of a device address conflict, the display changes to this setting.	
Communication	The room unit has a device address and a geographical zone, which it uses for communication with the controller and other devices on the bus system. Therefore, address assignment must be planned for data to be transmitted correctly.	
Device address (d)	The room unit automatically provides the device address the first time it is powered up, or it searches for a free device address at the push of a button. However, manual changes are also possible.	
Geographical zone (A)	The geographical zone (apartment) must match that of the controller, so it must be entered during installation.	
Bus traffic	Bus traffic, which is mainly influenced by the frequency of room temperature measured values, can be limited using the room temperature threshold function. The device does not transmit a measured value until it exceeds the threshold value.	
KNX	The room unit is intended for LTE mode, but is capable of KNX S-mode integration. Therefore, consult the KNX bus system description for planning and installation.	
Commissioning	The service level and expert level are used for commissioning. The procedure is described in Installation Instructions CE1G1633.	
Mechanical design		
Room unit	<ul><li>The unit consists of the following components:</li><li>Housing with integrated electronics and operating elements</li><li>Base for wall mounting with the connection terminals</li></ul>	
Operating elements		
	Timer button	
	Knob	

Mode

1633Z03

•••

Mode button

SIEMENS

Synco QAW740

CE1N1633en

2014-07-30


### Mounting and installation notes

**Product liability** 

- The products may only be used in building services plant and applications as described above
- When using the products, all requirements specified under "Technical data" must be observed

Engineering

- Mounting in recreation or reference room
- The place of installation should be chosen so that the sensor can capture the room temperature as accurately as possible, without being affected by direct solar radiation or other heating or cooling sources
- Mounting height is about 1.5 meters above the floor
- · The basic principles of the KNX bus system must be observed (see documents CE1N3127 and CE1P3127)
- The unit can be fitted to most commercially available recessed conduit boxes or directly on the wall

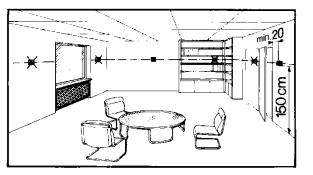

Installation

Wall mounting with base

The controller must not be exposed to dripping water

Installation and operation

- For the electrical installation, the local safety regulations and standards must be ٠ complied with
- Installation and operating instructions are enclosed with each device •

Maintenance	The room unit QAW740 is maintenance free (no battery changes, no fuses). The housing may only be cleaned with a dry towel.
Repair	The room unit cannot be repaired on site.
Disposal	

The devices are considered electronics devices for disposal in terms of European Directive 2012/19/EU and may not be disposed of as domestic waste.

- Dispose of the device via the channels provided for this purpose.
- Comply with all local and currently applicable laws and regulations.


Technical data		11th and 1	
Room temperature	Measuring range	045 °C	
measurement	Time constant	13 min	
Interfaces	KNX bus		
Interfaces	Type of interface	KNX-TP1	
	Transceiver	TP-UART	
	Baud rate	9.6 kBit/s	
	Current draw bus	7.5 mA	
	Bus loading number (SBT)	1.2	
	For more information about the KNX	Data sheet CE1N3127en,	
	bus, refer to the following pieces of documentation:	Basic documentation CE1P3127en	
Wiring connections	KNX bus	As per data sheet CE1N3127en	
	Type of cable	2-wire, unshielded twisted pair; connections non-interchangeable as per data sheet CE1N3127en	
Degree of protection	Protection class	III according to EN 60730-1	
	Protection degree of housing	IP40 according to EN 60529	
	Degree of pollution	2 according to EN 60730-1	
		suitable for residential, commercial and industrial environments	
Environmental	Operation	class 3K5 to IEC 721-3-3	
conditions	Temperature	050 °C (noncondensing)	
	Humidity	< 85 % rh	
	Transport Temperature Humidity	class 2K3 to IEC 721-3-2 –2570 °C < 95 % rh	
	Storage	class 1K3 to IEC 721-3-1	
	Temperature	–2570 °C	
	Humidity	< 95 % rh	
Directives and	Product standard	EN 60730-1	
Standards		Automatic electrical controls for household and similar use	
	Electromagnetic compatibility (Applications)	For use in residential, commerce, light- industrial and industrial environments	
	EU Conformity (CE)	CE1T1633xx <sup>*)</sup>	
	RCM conformity		
	Emissions	AS/NZS 61000-6-3	
Environmental	The product environmental declaration	CE1E1633en <sup>*)</sup> contains data on environmentally	
compatibility	compatible product design and assessments (RoHS compliance, materials		
, ,	composition, packaging, environmenta	· ·	
Other features	Software class	A to EN 60730-1	
	Housing color		
	Front	white NCS S 0502-G	

\*) The documents can be downloaded from http://siemens.com/bt/download.

CE1N1633en

2014-07-30

# SIEMENSBOILSIEN Connection diagram

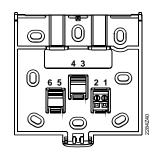


#### CE+ KNX bus data line, positive CE- KNX bus data line, negative - - -- - - -

1

2 3 4

5 6

Dimensions

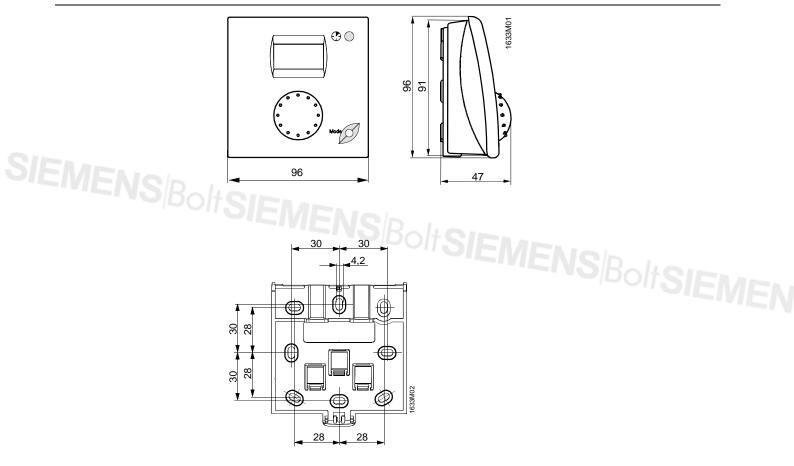



Subject to change

6/6

Siemens Building Technologies Room unit QAW740

CE1N1633en 2014-07-30